



Hitachi Highly

Rollkolbenverdichter

Rotary Compressors

Spezifikation

Installation Manual

WHP04200VRKQA7JT6

R 410A - R 454C- R 454B - R452B 11,0 cm3/rev

DC/BLDC

1000 - 7200 min-1

RIES GmbH, Rudolf-Diesel-Str. 10, D 64569 Nauheim, GERMANY

Phone: +49 6152 9741 0, Fax: +49 6152 9741 21, Email: info@ries-gmbh.de, Website: www.ries-gmbh.de

Table of Contents

1.	WHP	204200VRKQA7JT6 Specifications ————1~4
	1.	Scope of application
	2.	Compressor specifications
	3.	Motor parameters
	4.	Parts and drawings list
	5.	General characteristics
2.	Standa	rds for the use of special compressors for heat pump water heaters—— $5{\sim}15$
3.	accej	
	1.	Acceptance basis
	2.	Acceptance rules
4.	draw	ing ————17~30
5.	Specif	ication modification experience ———————————————————————————————————

SUBJECT

Model WHP04200VRKQA7JT6 SPECIFICATION

PAGE:1/30

1. SCOPE

This specification is applied to SHANGHAI HIGHLY compressor.

2. SPECIFICATION OF COMPRESSOR

2.1 Model WHP04200VRKQA7JT6

2.2 Power source input to SHEC inverter

Rated Voltage/Frequency/Phase 220V/50Hz/single

2.3 Application Heat pump water heater or air conditioner

2.4 Refrigerant R410A /R454C/R454B

2.5 Compressor Cooling Forced air

2.6 Displacement

2.7 Performance 11.0ml/rev (Double-cylinder)

Refrigerant	R410A	R454C	R454B
Item	Rated Condition	Rated Condition	Rated Condition
Rotational speed	3600 min ⁻¹	3600 min ⁻¹	3600 min ⁻¹
Nominal Heating Capacity	4295W	2940W	4128W
Motor input	1045W	660W	990W
Current	3. 60A	2. 30A	3. 41A
COP(see*)	4. 10	4. 45	4. 17
	Test Condition	ons	
Evaporating temp.	7.2℃	7. 2°C	7. 2℃
Condensing temp.	54. 4℃	54. 4℃	54.4℃
Liquid temp. entering expansion valve.	46. 1℃	46. 1℃	46.1℃
Return gas temp.	35℃	35℃	35℃
Ambient temp.	35℃	35℃	35℃
Wind speed	2m/s	2m/s	2m/s

SUBJECT

Model WHP04200VRKQA7JT6 SPECIFICATION

PAGE:2/30

* COP= Heating capacity (W)

Motor input (W)

2.8 Allowable frequency range 1000~7200rpm

2.9 Allowable amount of

1250g

refrigerant charge 2.10 Amount of oil charge

480±20 ml(Initial)

2.11 Oil

HAF68D1/HAF68D1U/ALPHA68HES or equivalent

2.12 Space volume of inner case

1200 ml

2.13 Net weight

8.4 kg incl.oil

2.14 Hermetic Terminal

1/4"quick connect type

2.15 Motor

Type Direct current brushless motor

Insulation class Class E

Winding resistance $1.867\Omega(\text{at }20^{\circ}\text{C})$

^{*} Nominal heating capacity equals refrigerant capacity adding motor input. Refrigerant capacity and motor input are measured by secondary Refrigerant calorimeter Methods of GB5773by Shanghai HIGHLY Electrical Appliances Co.,Ltd. Allowable heating capacity should be more than 95% of the nominal heating capacity and allowable motor input should be less than 107% of nominal motor input.

3. MOTOR PARAMERER

project	parameter	Description
3.1 Rotor Pole(Pole)	6	6 electrodes 9 slots concentrated winding
3.2 Rated Frequency Range (Hz)	16.7-120	Mechanical Frequency, Relating to VDCmax of Inverter
3.3 Demagnetizing Curren (A)	18.50	Peak Current, at130°C, -5% Demagnetizing Rate
3.4 Inductance Ld (mH)	Sheet 1	
3.5 Inductance Lq (mH)	Sheet 1	
project	parameter	description
3.6 Winding Resistance (Ω) (20°C)	1.867 (20℃)	Phase-to-Phase
3.7 Voltage Constant (Vrms/krpm)	49.20	Phase-to-Phase
3.8 Torque Constant (N·m/Arms)	0.78	Torque/Current
3.9 Inertia (Kg·m²)	0.000311	
3.10 Flux Фа (Wb)	0.1279	$\varphi(\text{Per Phase, Peak}) = \frac{\sqrt{2} \times E0}{2\pi f \sqrt{3}}$
3.11 Magnet Material	NdFeB	

1: Item measurement frequency 100Hz

Current (RMS) 1.0	2.0	3.0	4.0	5.0	6.0	7.0
Lq(mH)	15.45	14.94	14.30	13.60	12.88	12.21	11.61
Ld(mH)	10.95	10.98	10.82	10.51	10.17	9.81	9.46

വ	т	n	ГΤ	~	\neg	г
		к	ľ	٦.		

Model WHP04200VRKQA7JT6 SPECIFICATION

PAGE:4/30

4. PARTS AND DRAWING LIST

	PARTS NAME	QTY/SET	DRAWING NO.	REMARKS	
Compressor		Compressor 1 4CYCD0416		Dimensioned sketc	
Mounting	Rubber grommet	3	4CYC00851		
Parts	Bolt	_	4CYC00940	*	
	Nut	_	(M8)	*	
Electrical	Terminal cover	1	4CYC01114		
Parts	Gasket	1	4CYC01113		
	Sleeve	1	4CYC01042		
	Nut	1	3CYC00004		
	Rubber washer	1	4CYC00174		
	Thermostat	1	4CYC01045	*	
			4CYC01268	Lead routing	
				Pressure guarantee	
			1	Chart	
			2		
				Oil level datum	
			3	Notes for rotational	
				speed change	
				Performance curse	
				Appendix	

^{*.} Out of supply, for reference.

5. CHARACTERISTICS

5.1 Residual moisture 200mg MAX

5.2 Residual impurities 100mg MAX

COMPRESSOR CRITERIA

1 Strictly observe the specification

The compressor should be used in specifications written in this "compressor specification" and not be used in specifications outside it. Moreover, accessories should be specified parts used in specified way, service must use specified parts too. The main circuit must link up with fuse or breaker.

2 Source voltage

Specified inverter is linked up with compressor terminals. Applied voltage of this inverter should be voltage specified in this "compressor specification". Alternating voltage should never be applied on terminals (for example: commercial alternating voltage of 1 100V,200V,3 200V). This is because that if applied alternating current the direct current motor will demagnetize.

3 Operating voltage range

The compressor should be operated in the range of rated voltage 10%, under standard condition and overload condition of rated frequency (applied voltage to inverter).

It must be satisfied with item 5,6,7.


4 Operating temperatures and pressures

The operating temperatures and pressures of a compressor should be within the range shown in the table 1.

Table 2

Item	Operating Envelope (see graph 1)					
Refrigerant	R410A	R452B	R454C	R454B		
Discharge pressure MPa{kgf/cm ² G}	4.762 MAX (condensing temperature : 70°C)	4.492 MAX (condensing temperature: 70°C)	3.465 MAX (condensing temperature: 75°C)	4.439 MAX (condensing temperature: 70°C)		
Suction Pressure MPa{kgf/cm ² G}	0. 272 [~] 1. 652	0. 254~1. 562	0. 172 [~] 1. 084	0. 251~1. 543		
wra{kgi/ciii G}	(Evaporation Temperature: $-30^{\circ}\text{C}^{\sim}25^{\circ}\text{C}$) It can also be $0.101^{\sim}0.172$ MPa when in transition, but should not be used when it is less than 0.101MPa					
Compressor case bottom temp	99°C or below an	nd 6 degrees higher t	han condensing temp	perature		
Motor winding temp.	Ratedvolta	nge:105℃ MAX				
Ra t e d Voltage±10%: 120℃ MAX						
Accumulator temp	Higher than outle	et pipe of evaporator				


Notes: Overload condition should not be continuous.

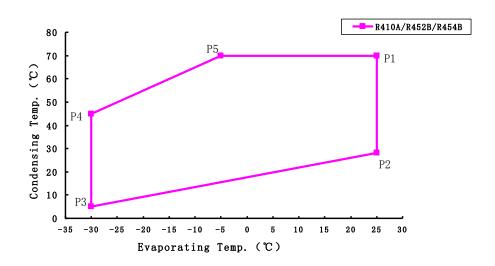

Graph 1(a)

	P1	P2	Р3	P4	P5
Condensing temperature	70°C	28°C	5℃	45℃	70°C
Evaporation Temperature	25℃	25°C	-30°C	-30°C	-5°C

HEAT PUMP WATER HEATER COMPRESSOR CRITERIA FOR LONG LIFE SYSTEM

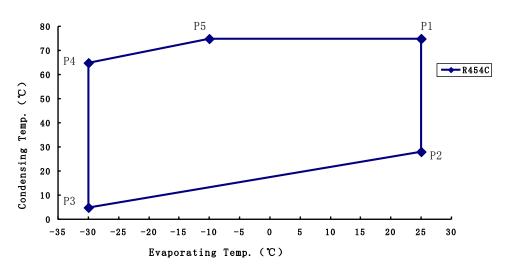

Graph 1(b) 图 1(b)

	P1	P2	Р3	P4	P5
Condensing temperature	75℃	28°C	5℃	65°C	75℃
Evaporation Temperature	25℃	25℃	-30°C	-30°C	-10°C

5 Current limitation

Current peak among motor terminals (include instantaneous current peak) should be below 18.5A(at130℃) in order to prevent magnet in motor from demagnetization.

6 Pressure difference between suction and discharge

In all allowable rotational speed range, the difference of pressure should be more than 0.39MPa{4kgf/cm²}. But if there is no problem of noise when assembled in air conditioner,

it can also below this value.

7 Discharge pipe temperature

Discharge pipe temperature is measured at a distance 300mm from the surface of compressor and should be less than $110\,^{\circ}$ C. The tip of the thermocouple is fixed by soldering when measuring discharge pipe temperature .Furthermore, soldering point is covered with urethane foam to prevent the effect of wind.

8 Air leakage test pressure

The pressure should be less than 2.847MPa{28kgf/cm²G}.

9 Oil back and oil level

The oil should be returned continuously to the compressor and the structure of the refrigerating system should not make oil stay in the system. The oil level in compressor should be higher than 7.5 mm from the lubricating piece fixed on the end of the crankshaft. If not keep the oil level, the shortage will occur, and influence the reliability of the compressor. (please check the oil level in the compressor with the sight glass which supplied form SHEC.

10 Dust of compressor hermetic terminals

Compressor hermetic terminals should be mounted with specified cover in right way to prevent dust entering, and should be used in direction which dust is hard to enter in.

11 Lead wire of compressor hermetic terminals

Measuring the temperature of hermetic terminals, lead wire should be resist to the temperature and be clamped so as not in touch with the surface of compressor and pipe.

12 Start-stop frequency

The frequency should be less than 6 times per hour. Operating time from start to stop should be more than 3 minutes. Stopping time should be more than 3 minutes. But oil level should be met to item 8. Suction and discharge pressure should balance completely before restarting.

13 Rate of rotational speed change

The rate of compressor rotational speed (acceleration) should be less than 133min⁻¹/s, But if The variable range is below 120min⁻¹, rate can also be less than 600min⁻¹ when rotational Speed is reduced to avoid temporary over- current. The change of compressor rotational speed is referred to chart 3.

14 Air and moisture in refrigerating system


The degree of vacuum in refrigerating system should be less than 133Pa (998×10⁻³mmHg) at room temperature just before charging refrigerant. The quantity of water should be less than 0.15ml.

15 Impurities in refrigerating system

- (1) The weight of residue on the inside surface of the heat exchanger and tube should be less than 0.01g/m². But metallic dust should not be permitted in the system. This value means the weight of foreign residue collected by filer paper after washing inside surface of the heat exchanger tubes with R-11.
- (2) Prevent the impurities from entering into the enclosed unit system used R410A. Refrigerant When the impurities entered into the enclosed system, it will damage the moving mechanism parts and result in the capillary depositing.
 - (3) Eliminate all system contaminants such as trichlorethylene, alkalies, soaps, oil, acids & washing fluid used at machining heat exchanger and tubes.
 - 16 Compressor vacuum operation

Compressor should never be operated while under vacuum. Otherwise, internal arcing can cause damaging parts.

- 17 The compressor should be operated for more than 20 seconds within 15 minutes after charging refrigerant into the system so proper lubrication results.
- 18 Liquid refrigerant return limitations
- (1) Liquid refrigerant level in s-tank should be lower than the top of s-pipe in s-tank.(see chart at right)
 - (2) There should not exist noise of the liquid refrigerant compression, current and vibrancy increase. System can append the assistant stank or reduce the amount of refrigerant to prevent from liquid refrigerant compression. Refrigerant system forbid liquid refrigerant from flowing back compressor in any case. In normal condition the overheat gas refrigerant should flow back compressor.

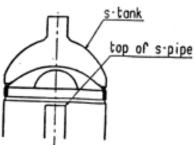

HEAT PUMP WATER HEATER COMPRESSOR CRITERIA FOR LONG LIFE SYSTEM

PAGE:10/30

- 19 Process limitation of refrigerating system
- (1) Be careful of avoiding oxide scale while soldering during assembly of refrigerating system.

(for example: flow or fulfill dry nitrogen)

(2) The motor winding temperature should be less than 149°C and hermetic terminal body temperature should be less than 177°C in process of manufacturing.

20 Apply for vehicle

The compressor should not be used on moving equipment such as automobiles, trains, ships, etc.

20 Installation

The rotational axis of compressor should be kept vertical during operation. But in actual application the axis incline must be within 5°at all directions during operation.

21 Pipe vibration

The displacement of the pipes, which connect from the compressor to other parts of the refrigerate-or systems, should be less than 0.8mm(1/32")when the compressor is operating at allowable rotational speed range and voltage range of rated $\pm 10\%$.

Displacement in excess of 0.8mm(1/32") will require changing tube length and/or routing.

22 Connecting tube design

In designing and routing tubing that connect from the compressor to the other parts of the air conditioner, following should be considered.

Moving tubes to the moving parts; minimum clearance 12.7mm(1/2")

Moving tubes to non-moving parts; minimum clearance 9.5mm((3/8")

Moving tubes never touch to lead wire.

23 Avoid refrigerant migration

The refrigerant migration to compressor shell should be avoided during the heat pump water heater system shut down periods, It's suggested that the electric heating belt should be used around the shell bottom when necessary.

HEAT PUMP WATER HEATER COMPRESSOR CRITERIA FOR LONG LIFE SYSTEM

PAGE:11/30

24 Miscellany

- (1) The compressor should be carried carefully to avoid drop, drag ,impact and should not apply partial force on projection parts such as pipe, hermetic terminals, foot during carrying and processing.
- (2) The compressor should not be operated to form a vacuum and to absorb air. The compressor only can run in one direction which according to lead routing wiring diagram. Never reversion otherwise the compressor will be in trouble.
- (3) The compressor should not be left opened in the atmosphere for more than 5 minutes.

When the air entered into the unit system with refrigerant, it will expedite the deterioration of the oil and result in the capillary depositing and the reducing of insulation resistance.

- (4) Electric pulse should not be applied to compressor when it is in vacuum.
- (5) The compressor should be kept in the place with low-dust, low-moisture.
- (6) The compressor can't be used in the place with corrosive atmosphere such as hot spring and chemical warehouse. It should not be the structure often splash water on the surface of the compressor forcibly.
- (7) The trouble of cross valve, electromagnetic valve, defroster, refrigerant controller, fan motor used in refrigerating system may cause compressor accident .So their reliability should be ensured completely. Moreover, the way of design, manufacture, application of refrigeration cycle with less-leak should be adopted.

- (8) The main electric circuit should be equipped with fuse or breaker.
- (9) Refrigerant should be charged from the end of condenser of refrigerating systems. Never Charge refrigerant to the compressor directly.

The refrigerant should always be charged in liquid state. When the refrigerant is charged in gas state,

The percent component will possibly be changed. Do not recharge with the remaining refrigerant in the system when leakage happened. Because the percent component of the refrigerant in the unit system had possibly been changed.

- (10) Temperatures within systems during stable compressor operation should not be less than
 - -35°C to prevent wax precipitation from the oil.
 - (11) Compressor mounting

Rubber grommets are designed soft to provide the noise isolation and to lessen vibration

Energy transmission. Stud bolt should be designed to provide sufficient clearance for noise and vibration isolation and to prevent compressor from coming off its mount.

- (12)The units of refrigerating system should be connected to earth.
- (13)There should be adequate clearance between the under-surface of Push-Nut and the upper surface of rubber grommets.
- (14) SHEC will not take any responsibility against accident that is caused by the accessories equipped by yourselves.
 - (15) The hermetic terminals of compressor should not be inserted slantingly and not be applied

twisting force after inserting so as to avoid reducing of terminal fixed force.

HEAT PUMP WATER HEATER COMPRESSOR CRITERIA FOR LONG LIFE SYSTEM

PAGE:13/30

- (16) The pipe and hermetic pens attached to the compressor should not be bent.
 - (17) The dropped compressor can't be used anymore.
- (18) Compressor can be used when ambient temperature is higher than -10°C. Confirm the start-up of compressor if the temperature of compressor surface is below -10°C. Heat up compressor to reach the temperature higher than -10°C with heater if the ambient temperature is below -10°C.
- (19) Set a thermistor on the case cover of compressor to prevent from accident of leakage of refrigerant.

 The thermistror can stop the operation of compressor when compressor in abnormal temperature.

 The lead wires of thermostat is enveloped with tube, as same as that of the terminals, to avoid direct contact with the compressor and pipe.
- (20) The compressor should not be splashed with water intentionally. Prevent moisture from entering into the enclosed unit system. When the moisture entered into the unit of the refrigerant, the refrigerant oil and the organic compound material presented in the hermetic motor will possibly decompose on the affecting of water. It will result in the capillary depositing and the reducing of insulation resistance.

It is necessary to install a dryer to dehumidify the residual moisture mixed in the refrigerant in the cycling system. The specially defined molecular-sieve dryer is advised.

SYSTEM

- (21) Use the refrigerant of specified brand. When the refrigerant not specified used, it will possibly cause trouble of the performance and reliability of the compressor by the impurities in the refrigerant.
- (22) The lead wires should be connected to hermetic terminals without being touched on the surface of the compressor.
- (23) The quantity and kind of contamination (the process materials) in the cycle should be grasped and managed. Carry on reliability test that input contamination a lot than anticipated contamination quantity.
- (24) To avoid water and impurity into he refrigeration system and make sure no leakage of refrigerant during the operating course. It's required to direct the erector and maintenance man of air-conditioner.
- (25) Adjust the start-up torsion of the compressor to above 0.55Nm by inverter. Confirm and measure the start-up current if change the parts and design.

25. PROCESS LIMITATIONS

- 25.1 The degree of vacuum in the refrigerating system should be less than 20Pa {150×10⁻³mmHg}at room temperature just before charging refrigerant.

 The quantity of water should be less than 0.2ml.
- 25.2 The weight of foreign particles on the inside surface of the heat exchanger tubes should be less than 0.05g/m².
 Metallic dust should not be permitted to enter the refrigerating system.
 This value means the weight of foreign particles filtered after washing inside surface of the heat exchanger tubes with R-11.

- 25.3 Eliminate all system contaminants such as trichlorethylene, alkalies, soap, acid, oil & washing fluid used at machining the heat exchanger tubes.
- 25.4 Purge parts with dry nitrogen or dry air to remove remains in parts (dust, detergent, etc.) before assembly of system. Time for purging :over one second for pipe ;over three seconds for heat exchanger . Purging pressure: 0.9±0.1MpaG.Dew point of dry air: Below -20°C.

Dry nitrogen should be charged in compressor before assembly of system.

Welding should be finished within one minute after charge of nitrogen. Dry nitrogen needs to be charged again and weld if over one minute. Always purge the compressor with dry nitrogen during assembly of system.

- 25.5 The motor winding temperatures should be less than 149 °C in process of manufacturing the refrigerating system. The temperature of the hermetic terminal body should be less than 177 °C.
- 25.6 The compressor should be operated for more than 20 seconds within 15 minutes after charging refrigerant into the system so proper lubrication results.


1. Basis for Checking upon Delivery


The Performance test will be carried out in accordance with this "compressor Specification".


The Safety Performance in accordance with GB4706.1 Safety of household and Similar electrical appliances General requirements and GB 4706.17 Safety Of household and similar electrical appliances Particular requirements for Motor-compressor.


2. Rule for Checking upon Delivery


If come across any quality problem, please notify the company in written form Within 30 days after the arrival of the cargo, the company shall exchange Exactly the number of the products, otherwise they shall be regarded as being Up to standard.

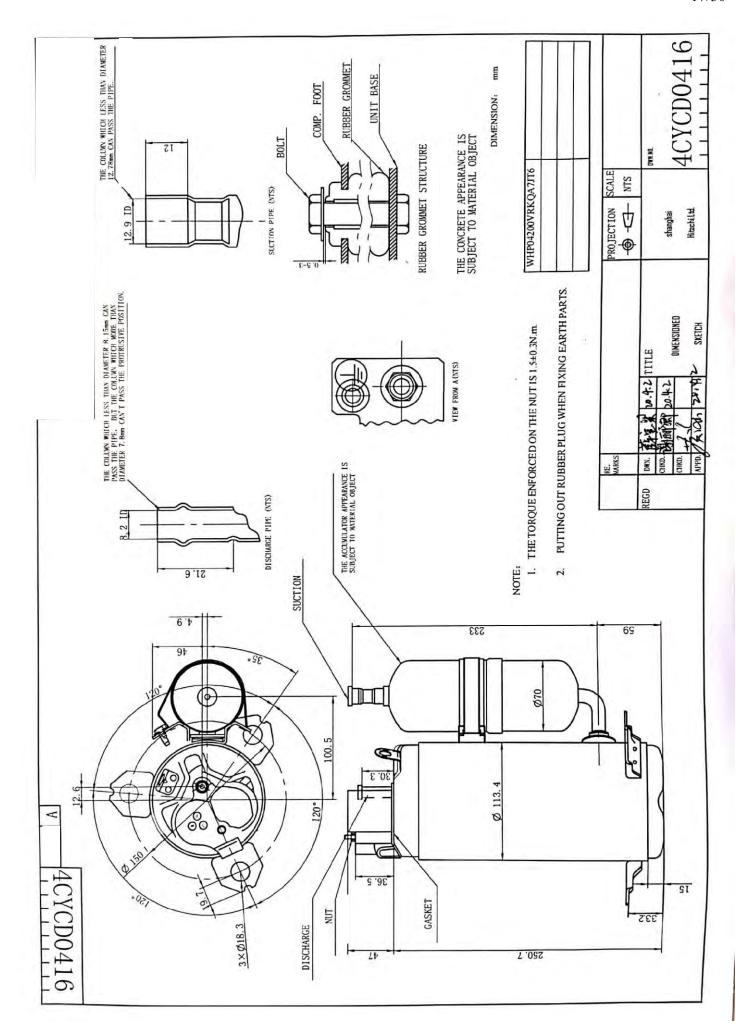


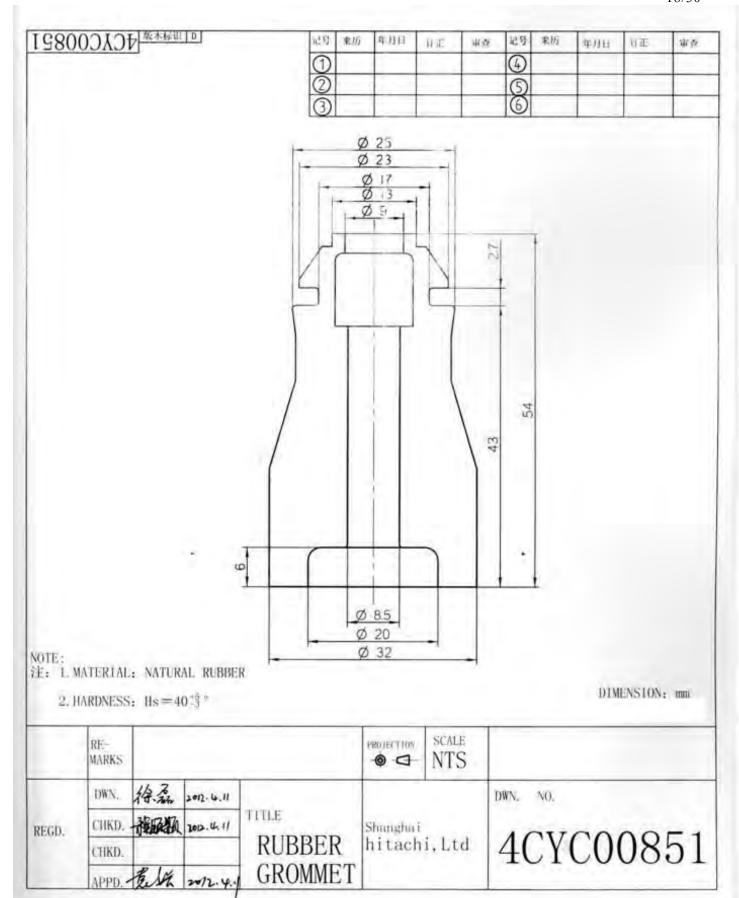


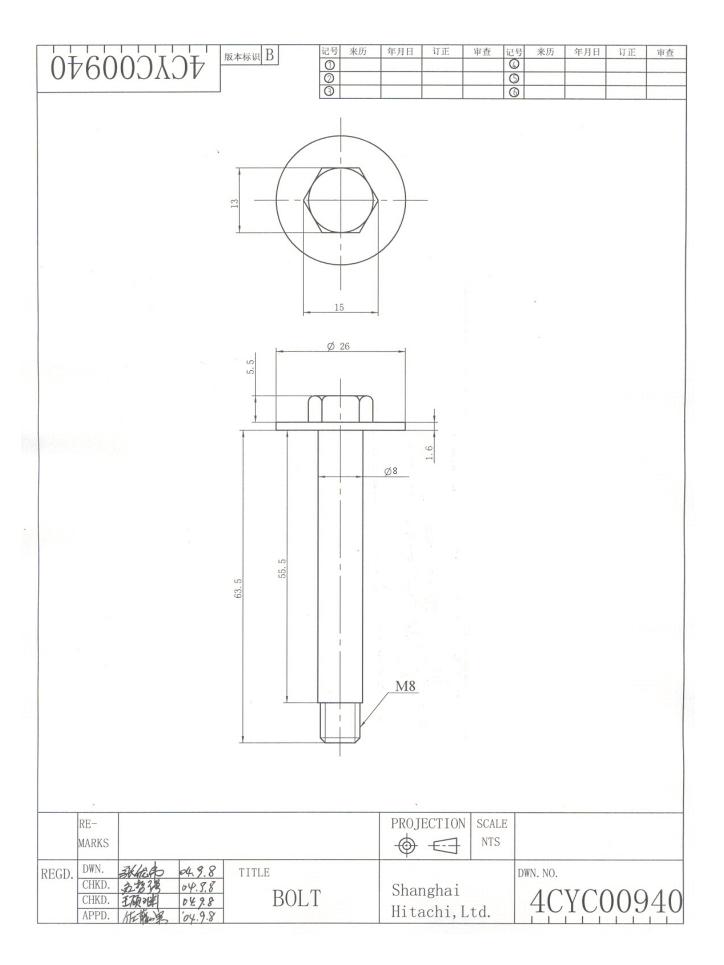


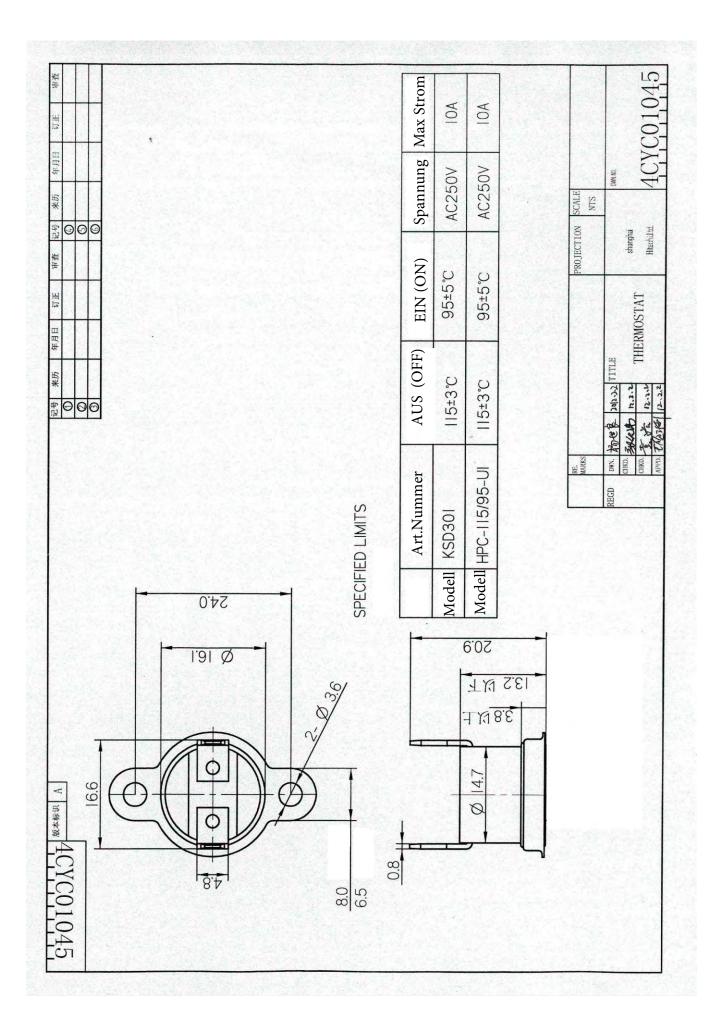


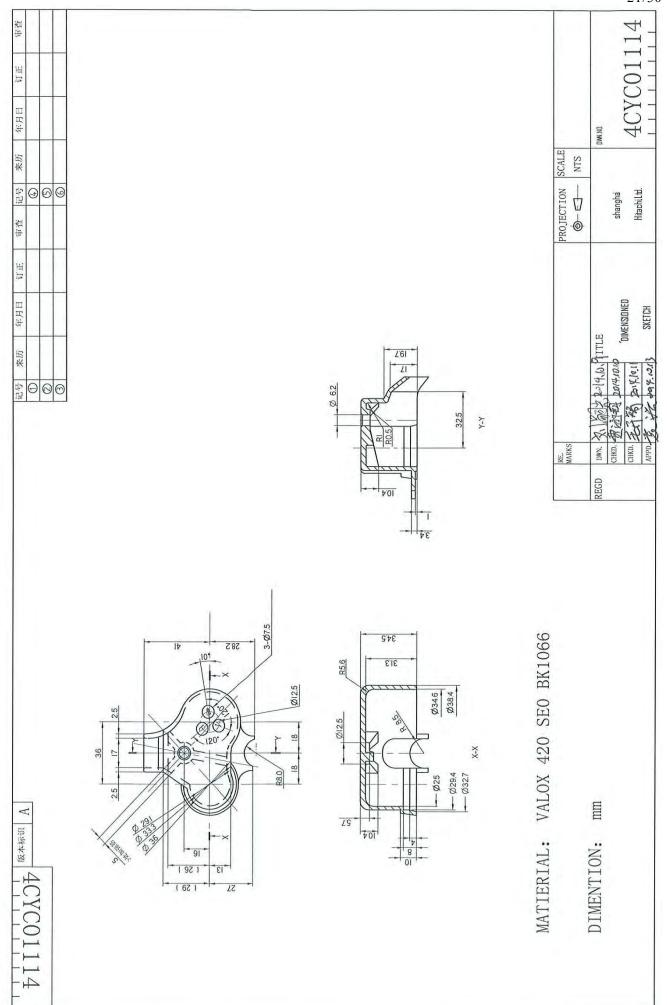


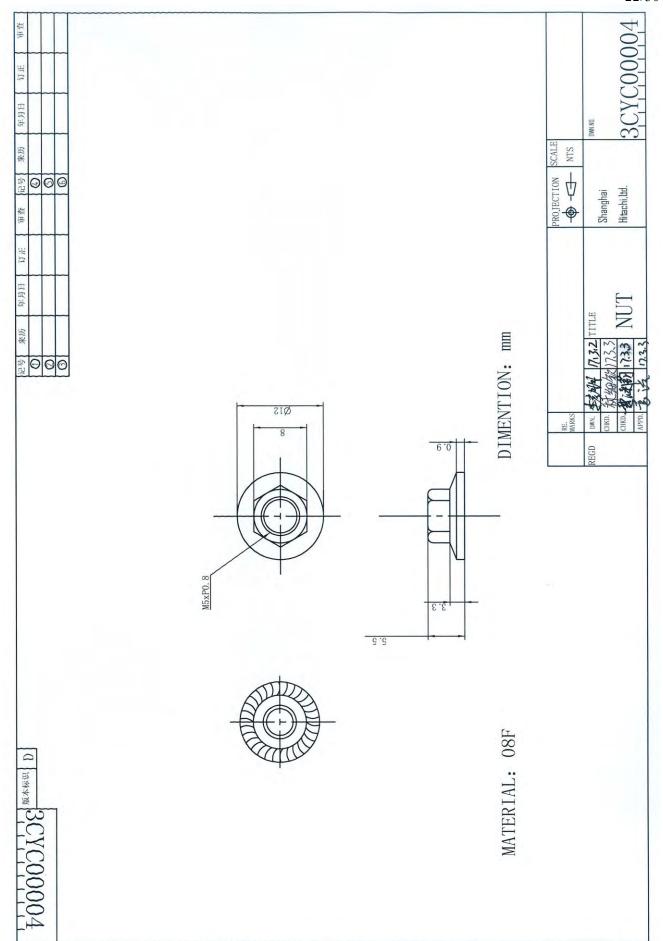

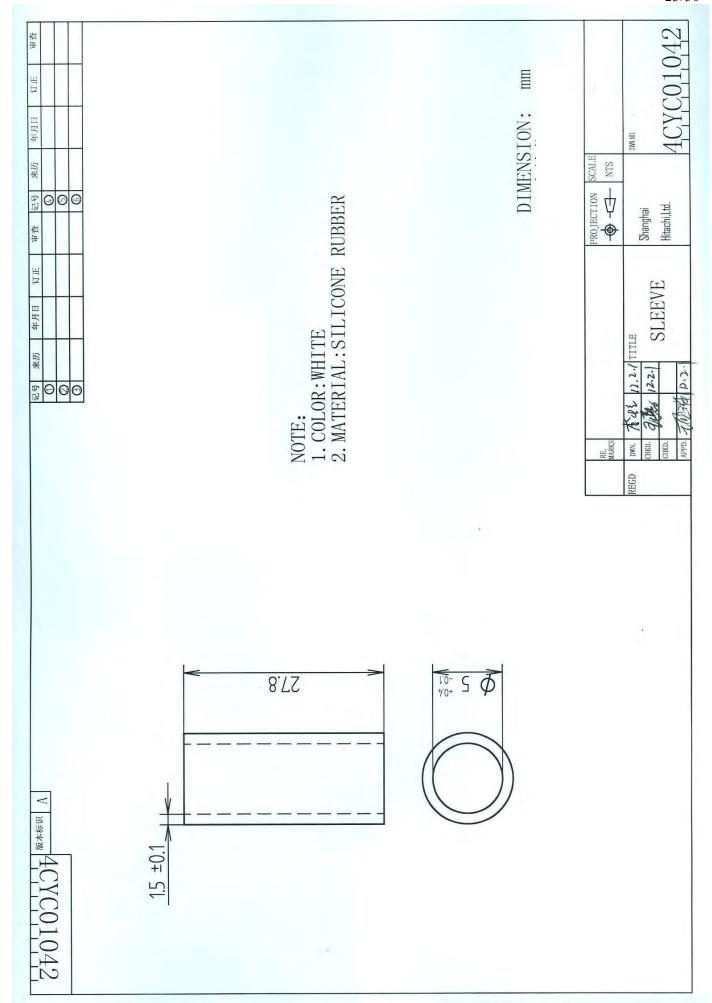

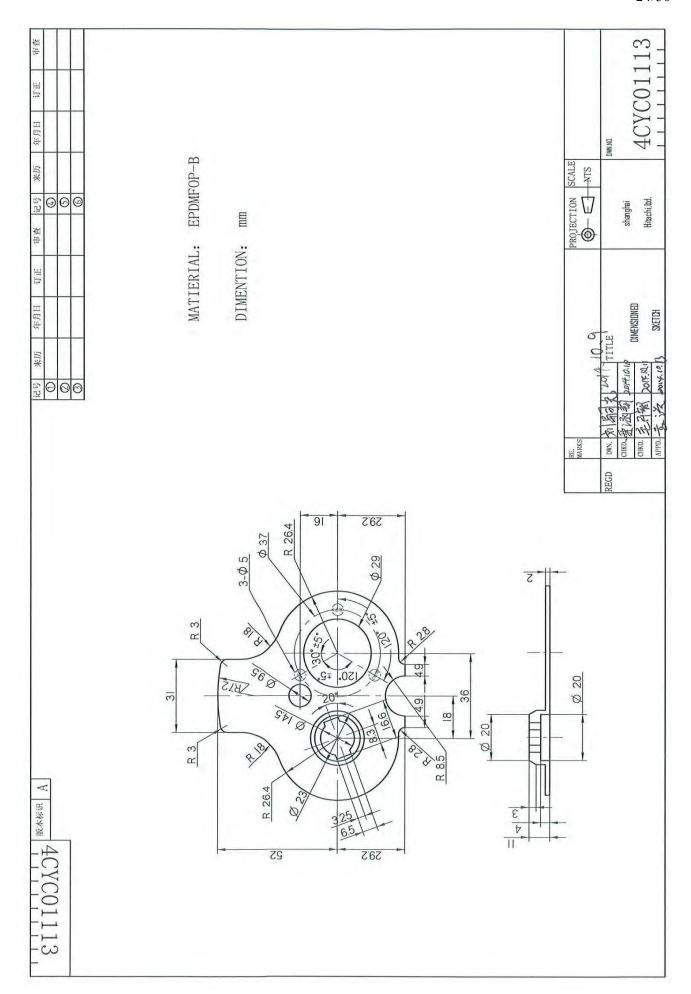

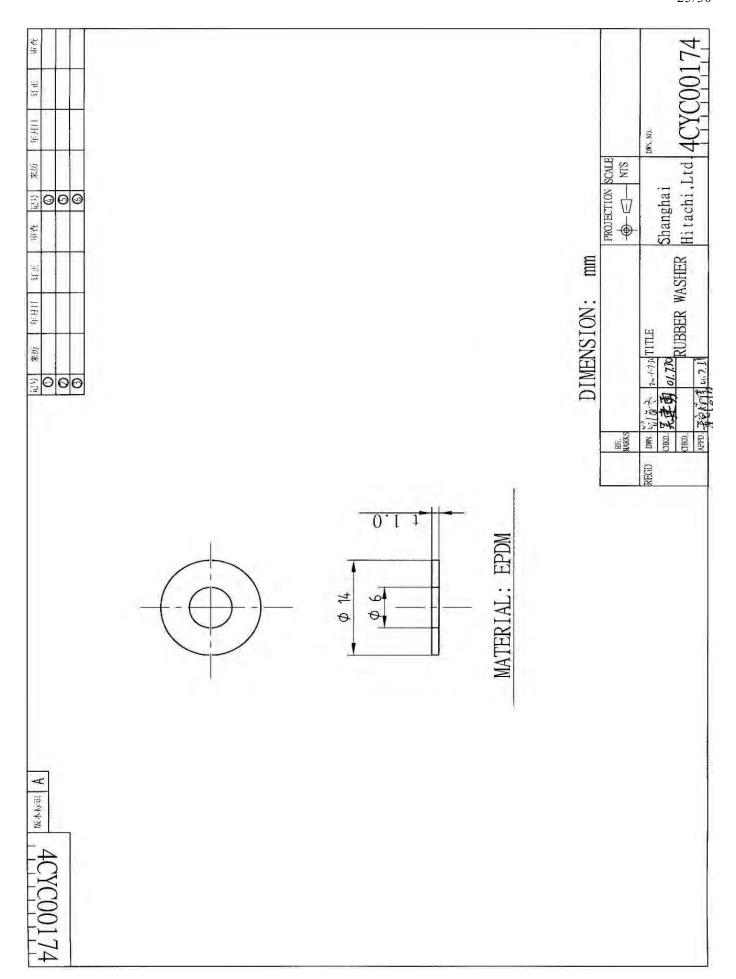

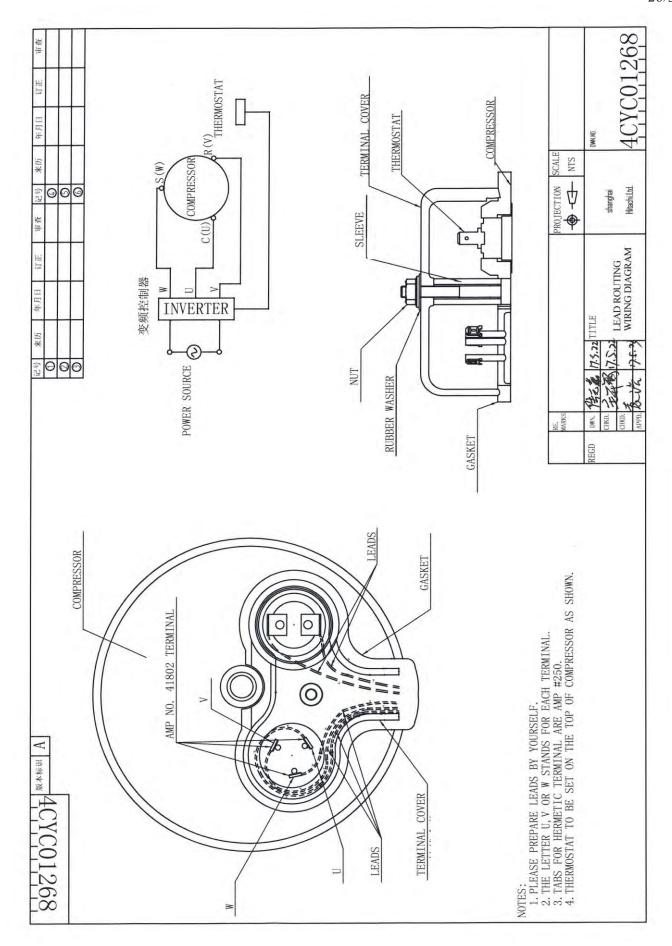

Druckgarantiekurve:




Compressor running speed range: Min 1000min⁻¹~Max 7200min⁻¹

	Rotational speed	Pd lim	it (MPa)	
	(rpm)	R410A	R454C	R454B
a	1000	2.73	1.80	2.55
b	2100	4.76	3.47	4.44
c	5000	4.76	3.47	4.44
d	7200	3.51	2.31	3.28

 $1000 \sim 1800 \text{ min}^{-1}$

CHART2 WHP DC INVERTER COMPRESSOR OIL LEVEL DATUM



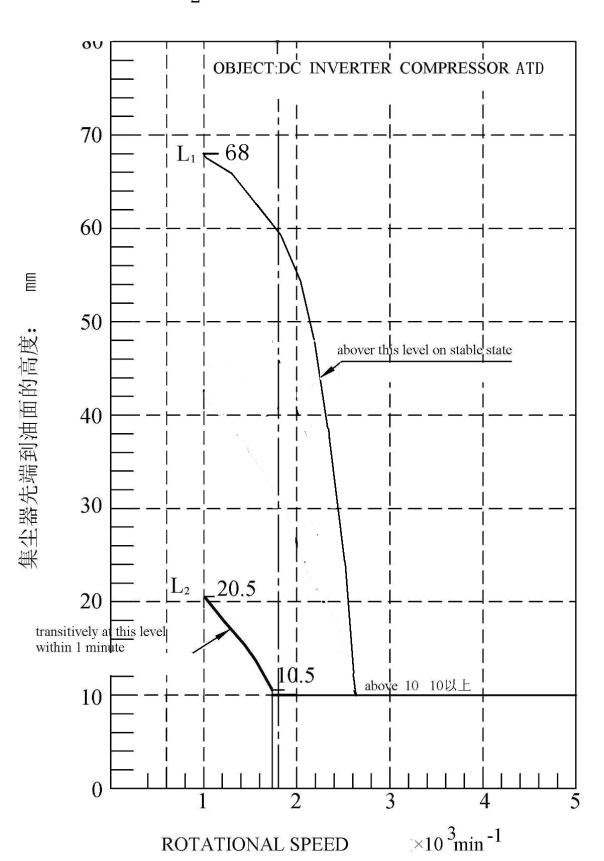







Anwendungshinweise für DC Inverter Kompressoren zur Drehzahlregelung Instruction for DC inverter compressor rotation speed control


Drehzahländerung /Speed change rate: <= 133min-1/s Max und Min Drehzahl in den einzelnen Spezifikationen Max and min speed is showed in the specification

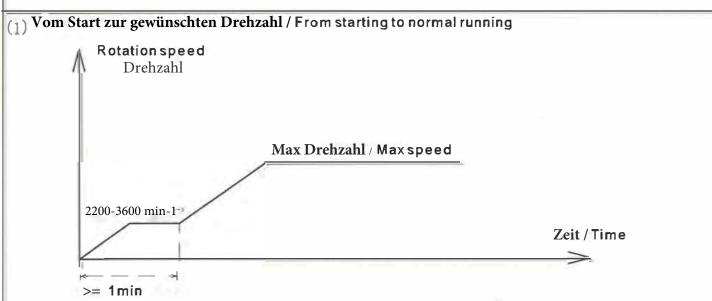

(2) Niedrige Drehzahl und unregelmäßiger Betrieb / Low speed un-continuosly running

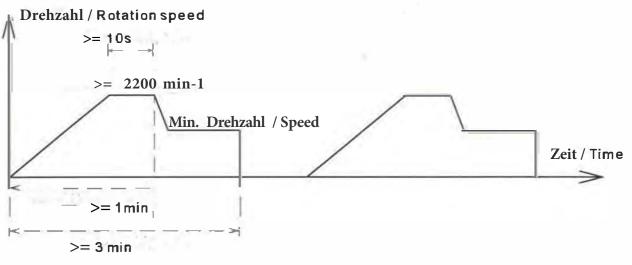


(3) Abtauung / Defrost mode (unter Verwendung eines 4 Wege Ventiles / by using 4 way valve)

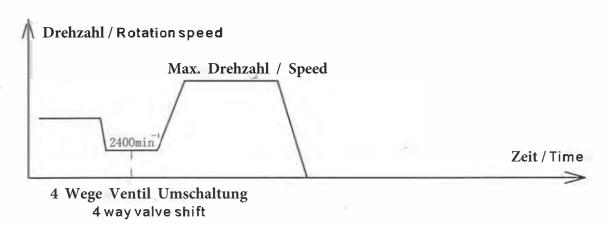

SHEC WHP COMPRESSOR WHP04200VRKQ

测定条件:蒸发温度7.2℃ 吸气温度35℃

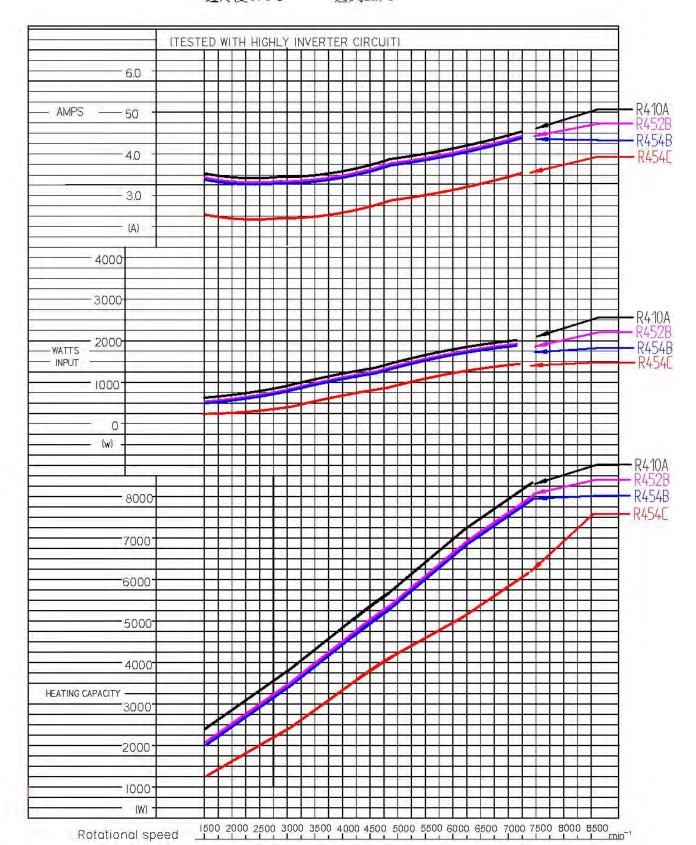

	Specification Revision Record							
序 号 No.	Date	Page in Spec	Revision Reason	Conclusion Date				
A								
В								
С								
D								
Е								
F								
G								
Н								
J								
K								
L								
M								
N								
P								
Q								
R								
S								
Т								
U								